

PIG Grippy Floor Mat

Instructions

BASIC INSTALLATION

1. Clean and dry floor thoroughly to remove any grease or residue.
2. Wipe the floor dry.
3. Cut Grippy Floor Mat to size with safety knife, using Installation Tool as a cutting board. **(fig. A)**
4. Position mat, smooth out and press into place using Installation Tool. **(fig. B)**
5. Trim corners at a 45° angle using cutting guides on Installation Tool to risk of corners curling up. **(fig. C)**

NOTE: For long runs, use multiple mat sections and have two people position the edges so mats line up straight.

MAINTENANCE

Frequency of Changeouts

PIG Grippy Floor Mat is extremely durable and designed to last up to 12 weeks. If the mat shows obvious signs of wear or a weakened bond to the floor before the end of that time frame, it should be replaced.

NOTE: Do not pick up mat to clean the floor underneath until you are ready to replace it.

Drying

PIG Grippy Floor Mat is highly absorbent and fast-drying. Absorbed water will evaporate; standard fans or floor blowers can be used for accelerated drying. For extremely wet conditions, use a wet vac or extractor to remove water.

Cleaning

PIG Grippy Floor Mat is low-profile and extremely durable so it can be left in place during daily cleaning. Floor scrubbers, vacuums, brooms and mops pass right over without damaging the surface of the mat. Standard floor scrubbers can be used to clean PIG Grippy Floor Mat. For best results, use low settings for water and pressure. Mat should be as dry as possible before cleaning with floor scrubbers. Tougher stains can be pretreated with standard cleaning products and agitated with a brush or scotch pad to loosen the soil.

Wet Season / Winter Weather Maintenance

Excessive rain, snow, ice, slush and salt make it hard to keep floors dry. We suggest the following best practices to help your PIG Grippy Floor Mat keep up with the mess:

1. Use longer runs or wider widths of Grippy Mat to minimise tracking.
2. Use a wet-vac, Rug Doctor® or extractor to remove excess water; the mat won't budge!
3. Grippy Floor Mat is very low-profile, so mops, scrubbers and extractors pass right over.
4. Use an air blower to speed up evaporation and eliminate the need for mat changeouts.

PIG® Grippy® Floor Mat Notice dhesive-backed mats are formulated to work with most common industrial and commercial floor surfaces but are not intended for home/residential use and wood flooring. All adhesive mats have some potential to leave residue or lift or discolour finish coatings, paint, and loose or pre-damaged tiles depending on the condition and age of the floor surface. If you have questions about the suitability of New Pig adhesive-backed mats for your application, test a 15cm x 15cm piece in a non-critical area before use.

PIG® Grippy® Floor Mats should be replaced if they show signs of wear or damage and should always be changed out every 12 weeks. Customer assumes the risk that a New Pig adhesive-backed mat may damage or alter their existing flooring or floor covering. Other than warranties implied by law, New Pig provides no warranty of fitness for a particular purpose and no warranty that an adhesive-backed mat will be fit for customer's intended use. Other than in respect of liability which New Pig cannot lawfully exclude, New Pig shall have no responsibility for, and customer hereby releases and discharges New Pig from, any direct, indirect, incidental or consequential damages to their floors, flooring material, or any other surfaces in their premises. Customer is solely responsible for determining the fitness and appropriateness of the use of New Pig adhesive-backed mats in their premises.

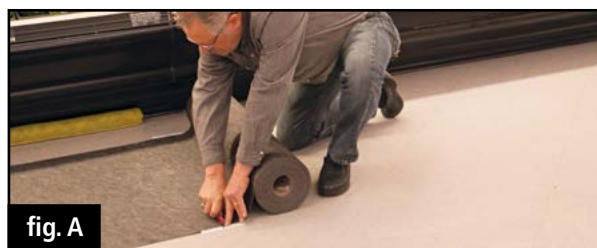


fig. A



fig. B



fig. C

Make installation even easier with our **Safety Knife (GRP012)** and **Installation Tool (GRP001)**



See our Installation Tool document for advanced tips & techniques.

PIG Grippy Floor Mat

Advanced Tips and Techniques

Installation Tool and Cutting Guide for PIG Adhesive-Backed Mats

Use our multipurpose tool to make any installation easier. Functions as a cutting board and guide to make straight edges and 45° corners. Works as a float to smooth out mat in fewer passes than using hands or feet.

Trimming Edges and Corners

If edges become worn or begin to lift, peel back mat until fresh adhesive is exposed, then trim and press new edge into place. When cleaning Grippy Floor Mat with floor scrubbers, trim corners at a 45° angle for best results (**fig. A**).

High-Traffic Areas

For areas with high traffic, cut mat corners at an angle to reduce potential lifting (**fig. A**).

Greasy Floors

For areas that are exposed to oil or grease, clean floors with a degreaser. Be sure to rinse the surface thoroughly and allow it to dry completely before installing Grippy Floor Mat.

Grouted Floors

To prevent edge lift, avoid placing mat edges directly over grout lines (**fig. B**). Grippy Floor Mat performs best when all of its edges are in direct contact with clean, smooth surfaces. After floor scrubbing, dry mop up any water left behind along mat edges.

Entrances

Size your Grippy Floor Mat to the entire width of your door, and provide enough length for adequate walk-off. Be sure to run seams in the same direction as your traffic flows. If you frequently run wheeled equipment in the installed area, avoid ending your mat run where turning and pivoting regularly takes place.

Side-by-Side Installations

You can join together multiple sections of Grippy Mat to provide more coverage. When "seaming" two mats together, install Piece 1 by its leading edge (as described in *Basic Installation* on front). Next, install Piece 2 by its side edge, abutting the long side of Piece 1. Make sure there is no gap or overlap, then smooth Piece 2 away from the middle seam, out toward the edges.

Seams

When two pieces of Grippy Floor Mat meet (end-to-end or side-by-side), make sure the edges do not overlap (**fig. C**). Flat seams help to avoid potential trip hazards and premature lifting.

